





**ORAC**<sup>®</sup>  
D E C O R




**How to repair open joints**

# Orac Decor Adhesives

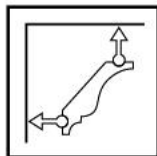

Installation

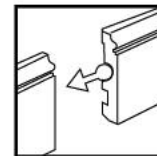

Joints



Perfect finish

1



Decofix PRO (FDP500)



Inside



Dry surface



Porous surface



Decofix POWER (FDP700)



Heavy profiles



Outside



Humid surface



All surfaces

2



Decofix ULTRA (FX400)



Inside



Outside


3



DecoFiller (FL300)



Inside

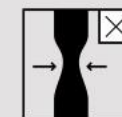


Shrinkage free



Paintable

# Orac Decor Adhesives

No quality issues will occur if the products are installed with Orac Decor® adhesives and if the provided instructions are followed to the letter.

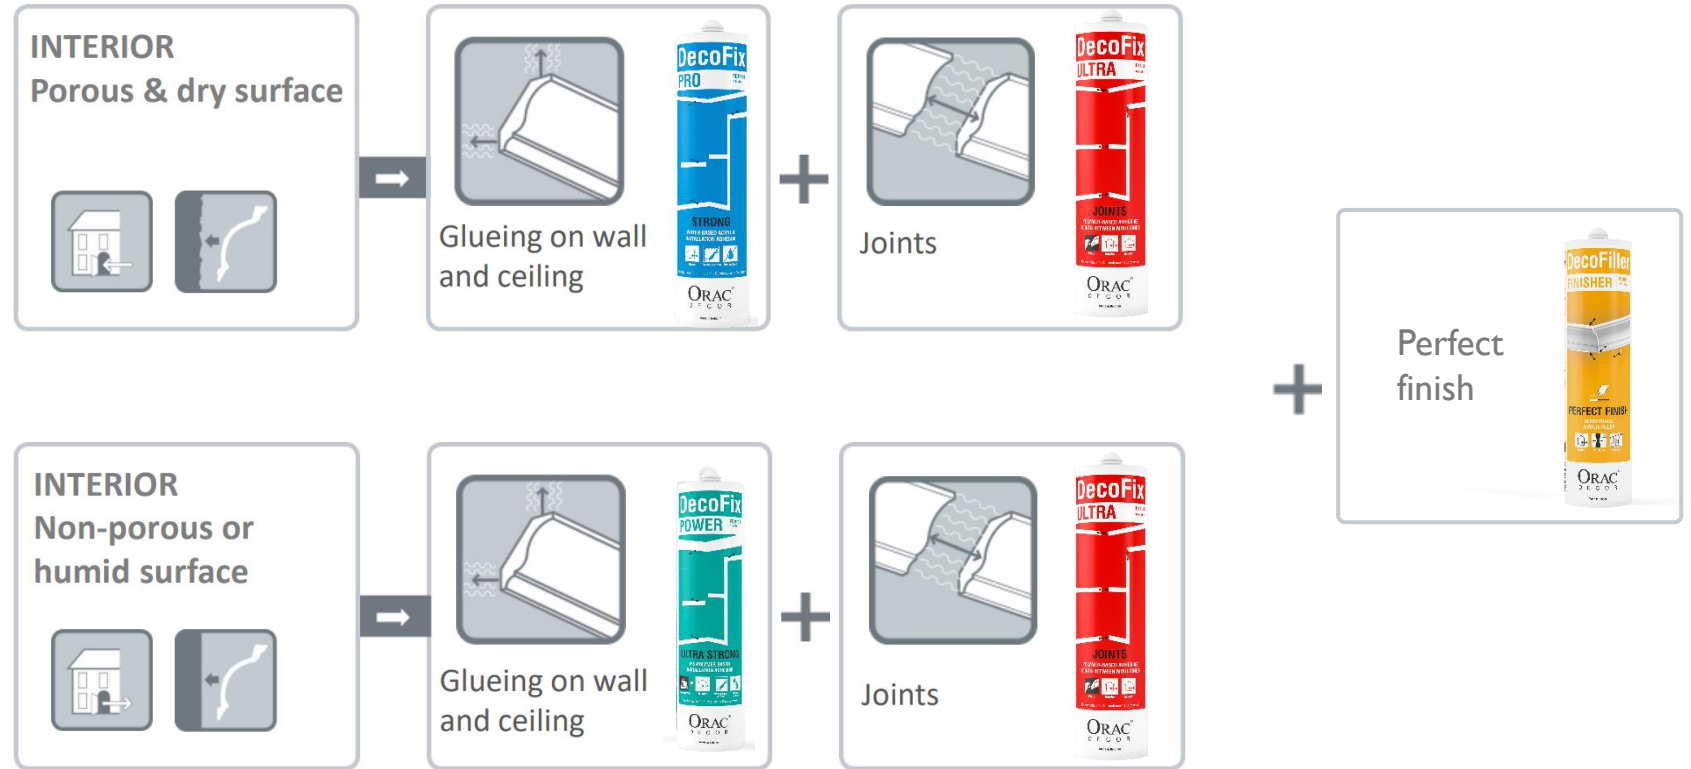

# Step 1

Cut the joint open and remove the adhesive residue

4




OPEN JOINT

# Step 2

Fill the joint with DecoFix Ultra

5

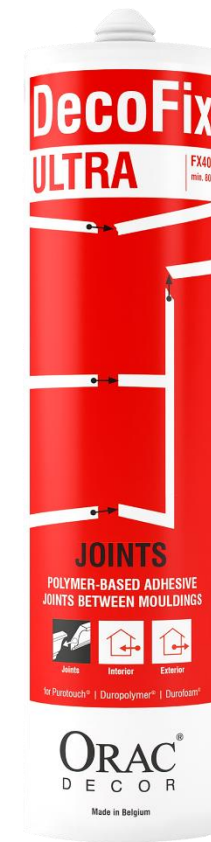

# Step 3

6  
Immediately after application, remove excess adhesive from the joint using a painter's knife. Then wipe the surface clean using a cloth with soapy water.



# Step 4

Use our DecoFiller to fill any gaps or imperfections.  
Remove excess DecoFiller with a painter's knife and water.

After 15 minutes the DecoFiller should be dried.  
Use sandpaper to finish and then paint.



# Expert tips!

- Put primer on the profile before painting with quality paint
- Paint when everything is dry





ORAC<sup>®</sup>  
D E C O R



Let's talk!