

# ORAC<sup>®</sup>

D E C O R

HOW TO REPAIR OPEN JOINTS

# ORAC DECOR® ADHESIVES

No quality issues will occur if the products are installed with Orac Decor® adhesives and if the provided instructions are followed to the letter.



**INTERIOR**  
Porous & dry surface



Glueing on wall and ceiling



Joints

Durofoam collection:  
use DecoFix Pro for joints

**INTERIOR**  
Non-porous or humid surface



Glueing on wall and ceiling



Joints

Durofoam collection:  
use DecoFix Pro for the joints

## STEP 1

Cut the joint open and remove the adhesive residue



OPEN JOINT

## STEP 2

Fill the joint with DecoFix Extra




DECOFIX EXTRA  
AFTER DRYING

### STEP 3

Remove DecoFix Extra within the hour with spatula. Definitely don't let DecoFix Extra dry out!

Then wipe surface clean with a cloth & acetone or similar product.

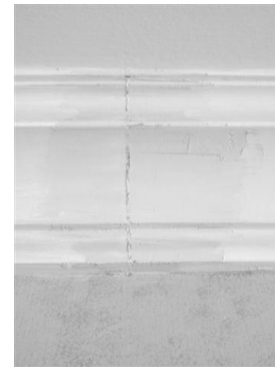

JOINT AFTER REMOVING  
EXCESS ADHESIVE

## STEP 4

Use caulk or equivalent to fill joints (mastic). Sand joint when dry. Paint.



SANDED JOINT



- Put primer on the profile before painting with quality paint
- Paint when everything is dry

ORAC<sup>®</sup>  
D E C O R

MORE TIPS & TRICKS

**[WWW.ORACDECOR.COM](http://WWW.ORACDECOR.COM)**